

NF-HS13



**Lütfen kullanma kılavuzunu dikkatlice
okumadan cihazınızı kullanmayınız.**

Değerli Müşterimiz,

Öncelikle kalitenin öncüsü olan NEWFRON markalı cihazımızı tercih ettiğiniz için teşekkür ederiz.

Modern tesislerde üretilen ve titiz kalite kontrolünden geçirilmiş olan cihazınızın size en iyi verimi sunabilmesi için,
bu kılavuzun tamamını cihazınızı kullanmadan önce dikkatle okumanızı ve bir başvuru kaynağı olarak saklamanızı rica ederiz.



1. OK 2. UP 3. Power key /Video Key / Image key / File play key / OK key

3. On/off key /screen backlight on/off key

4. Down 5. Mode 6. TF card slot

7. AV for rear camera 8. USB 9. Lens

10. Speaker 11. Display screen 5.5inch

Function 1: Switch function

In the off state, press and hold the【Power】key for 2 seconds to turn on the power of the unit, and the machine will start working automatically.

Press and hold the 【Power】 key for 2 seconds in the power on state to automatically save the video file and user settings and shut down.

Function 2: Enable/disable recording function

In the recording mode, press the【OK】 key to start recording, and press the 【OK】 key again to stop recording.

Function 3 : camera button

In the photo mode, short press the 【OK】 key to take a photo.

Function 4: file play button

In the file browsing mode, press the 【OK】 key to play the video.

Function 5: 【OK】key In the standby recording mode/photo mode/playback mode state; long press the 【M】 key to enter the menu mode, short press the 【UP】 key / 【DOWN】 key to browse, short press the 【OK】 key to confirm .

3.Mode key/ Emergency Lock Key

Function 1: Mode function

In the standby mode,press the 【M】 key momentarily to switch between different modes (REC/photographing/play).

Function 2: Emergency lock function

In the recording mode, if you want to protect the current video from being overwritten, press the 【M】 key to

activate the emergency lock function. At this time, the lock file icon appears at the top left of the screen, and

save the current entire segment of the accident as a special one. Image, this image will not be overwritten.

4.Up Key/Fast Backward/ Camera switch

Function 1: page up function

In the menu settings and playback mode, it is the page up function.

Function 2: Rewind

In playback mode, press the **【UP】** key to rewind.

Function three: camera switching function

The dual camera is automatically displayed after accessing the external rear camera. In the video mode,

press the **【UP】** key to switch between the front camera, picture-in-picture, and rear camera

display modes. In the camera mode, press the

【UP】key to switch between the front camera and the rear camera.

5.Sound Recording / Down Key

Function 1: Turn off the recording function

In the recording mode, press the **【DOWN】** key to turn off the recording function. At this time, the

microphone on the upper left of the screen becomes a prohibition icon, indicating that the recording function has been turned off. Press again to turn on the recording and the icon to turn on recording.

Function 2: Page down function

The page down function is available in the menu settings and playback mode.

Function three: fast forward

In playback mode, press the 【DOWN】 key to fast forward.

6.Menu key

Function 1: Menu function

In the standby mode, press and hold the 【M】 key to enter the main menu function setting table, short press

the [Up] or [Down] key to select the option to be set, and press the 【OK】 key to confirm. After setting,

press the 【M】 key briefly to exit the menu setting function. 【The menu setting method is the same

in the recording mode, camera mode, and playback mode】

7.Reset Key

In the case that the machine crashes and cannot be turned on and off normally, press the reset button to reset the machine to restart.

II. Installation instructions

1. Turn off the car engine.
2. Insert the TF card into the recorder card slot.
【Note】 Please use high-speed TF card
【Class10 or above】 , the capacity is not less than 4MB, and the TF card supports up to 128 GB.
3. Fix the recorder to the original rearview mirror of the car.
4. Insert the car charger into the car cigarette lighter.
5. Connect the recorder's USB port to the car charger with a charging extension cable.

【Note】 The wiring extension cable can be laid along the edge of the windshield of the car during wiring.

6. Install the rear camera on the rear of the vehicle and pay attention to the direction when installing.

Wiring

can be laid along the roof of the vehicle. After the installation is complete, connect the rear plug to the rear

camera interface of the recorder.

7. Adjust the lens position to ensure that the lens is level with the ground.

8. Start the engine and check that the machine is installed correctly.

【Note】 When the machine is installed correctly, the system work indicator lights up; the machine starts to

enter the recording state, and the recording indicator flashes. Please check if the picture on the display is

normal. If the display is inverted, please contact us in time.

III. Brief introduction of function

1. Use automatic recording function

Start the engine of the vehicle, then the recorder will automatically start, the charge system and the charge indicator will be on and the video indicator will flicker. Stop the engine, then the recorder will automatically save the recording content and stop automatically. The recorded video will be stored in the TF card by segments. When the TF card is full, the early video will be covered. The recording time interval may be set up in the menu and chosen from 1min/2mins/3min s/off.

【Notice】

- a.If any gear in “1/2/3” is chosen, the recorder shall cover the previous recorded video when TF card storage is full;
- b.If you choose “off”, then the recorder shall save the files recorded in every 3 minutes, and stop video recording once TF card is full.

c.Video of front and rear camera are respectively saved in “DCIMA” and “DCIMB” folder of TF card.

2. Use manually recording function

According to the recorder 【power】 key, recorder starts, press the 【OK】 key to start the video, the video

dots flashing and display recording time. If you need to turn off the long press 【power】 key 2 seconds,

the recorder can automatically save the record and shutdown.

3. Use shooting function

In power-on state, press the 【M】 key shortly to enter the image mode. In such case, the icon in the left upper

corner of the screen will change from video recorder to image taker; press the 【OK】 key shortly again to

take pictures. To switch to video mode, press the 【M】 key shortly for twice.

4. One key lock function

This machine is equipped with one key lock function, which can lock the video needs to be saved instead of cyclic covering. In video recording mode, short press **【M】** key, the recorder can lock the video recorded.

4. Date/Time Setup

In standby state, press the **【M】** key shortly to enter the system setup menu; press the **【UP/DOWN】** key to move the cursor to the option of date setup. Then press the **【OK】** key shortly to confirm and enter the setup menu. Press **【UP】** and **【DOWN】** key to adjust the date and time, press the **【M】** button to switch between date and time.

【Note】 For the effective recording of the date and time for the traffic accident, be sure to set correct time before use.

6. Function of One-key Mute

In working state, press the **【DOWN】** key shortly, then the microphone icon in the left upper corner of the screen will turn white, indicating that the video and audio synchronization has been off. In such case, the recorder will record only video rather than audio; press the **【DOWN】** key shortly again, then the microphone icon in the upper part of the screen will turn colorful, indicating that the video and audio synchronization has been recovered.

【Tip】 The setup will be saved automatically and thus it is unnecessary to set mute for the next startup.

7. U-disc MODE

The recorder is connected to the computer USB interface through the data line, and the screen displays

the disk, the camera, the video recording mode, and the three optional modes. Press the

【Up/Down】

key to choose the option of disc and press the **【OK】** key shortly to enter U-disc mode.

8. Replay

In power-on state, press the **【M】** key shortly for twice to switch to replay **【M】**. Press the

【UP/DOWN】 key shortly to find the desired file, press the **【OK】** key shortly to play the file. To exit, press the **【M】** key again.

9. Visual image of automobile reversing

First of all, car charger must be connected to the recorder. Black and red line on the pulling camera need to be connected to backup light. Plug the car charger in can automatically start video recording state. If a car is in reverse gear at any state, it will present reversing image. After finishing visual rear view, the recorder returns to video recording mode automatically.