RS-Q60.4

Features:

AMPLIFIER OWNER'S MANUAL

NORMAL INSTALLATION

- High Performance Anolog Circuit Design
- Mini Plus Size Footprint for Easy Installation of Many Applications
- Variable Full Crossover Filters: LPF / FULL / HPF
- Surface Mount Component Technology
- Audio Precision Quality Control Verification
- Stable&Reliable Multi Layers PCB Trace Layout
- Power & Protection & Clipping Led Lights Status Indicator

REISS AUDIO

Short Circuit, Thermal and Voltage protection

(2-8 OHM)

SPEAKER

SPEAKER

Engineering in Turkey / www.reiselektronik.com.tr

SPEAKER

SPEAKER

(2-8 OHM)

Engineering in Turkey / www.reiselektronik.com.tr

(I) REISS AUDIO

THANK YOU

AMPLIFIER OWNER'S MANUAL

Thank you for choosing REISS / RS-Q60.4 amp! Your choice of REISS / RS-Q60.4 amp indicates a desire for high quality music reproduction in the automobile. RS-Q60.4 amp brings to you over four decades of car audio expertise. So whether you are a daily driving music lover, or a serious car audio competitor, RS-Q60.4 amp have

the product for you! To take full advantage of the RS-Q60.4 amp gear you have just purchased, please read and follow the instructions in this manual. As with all of our products, professional installation by an authorized REISS AUDIO dealer is highly recommended! Otherwise, the performance of your new gear may not be satisfactory. In addition to the installation services and expertise offered by an authorized REISS AUDIO dealer, the warranty of this product may be extended when installed by an authorized REISS AUDIO dealer . Be sure to ask your authorized REISS AUDIO dealer about whether your product may qualify for an extended warranty. You're Headed in the Right Direction with REISS / RS-Q60.4 amp!

INTRODUCTION

The REISS / RS-Q60.4 amplifier offer high quality audio reproduction for the audiophile and the everyday listener a like. All models feature fully variable crossovers with 12 dB per octave slopes, allowing you the ability to tailor the sound to best fit the speakers and your listening preferences.

Fully Variable Crossovers Fully variable crossovers promote installation ease and save the cost of outboard crossovers. Additionally, they may be used in conjunction with outboard passive or active crossovers, depending on the complexity required by the system. The 12 dB per octave slope offers steep roll-off above or below the selected frequency

Protection Circuitry Against Overload, Short Circuit, Thermal, Low Voltage, High Voltage, and Reverse Polarity. These Protection features are designed to protect the amplifier from misuse, as well as from common causes of amplifier failure.

INSTALLATION

Professional installation by an authorized REISS AUDIO dealer is highly recommended! Otherwise, the performance of your new gear may not be satisfactory. In the event that you decide to do your own installation. please read and follow this manual very carefully. Failure to do so may compromise the integrity of this product. your automobile, and possibly void the product warranty.


Amplifiers are generally mounted in the hatch/trunk area of a car or SUV, and under or behind the seat of most pick up trucks. Select a location that will provide adequate ventilation for the amplifier. Avoid mounting the amplifier with the fins facing down. The fins should be facing up, either vertically or horizontally. Secure the amplifier with the screws provided.

Before securing the amplifier, inspect the mounting location carefully to ensure that you do not drill into or damage any electrical, hydraulic, fluid, or fuel lines.

Input Section

Because of the wide range of head unit output configurations all RS-Q60.4 amp have an adjustable input sensitivity of "Gain" The gain is not a volume or a power limiting control like a throttle. It makes the amp more sensitive to input from the stereo, with the gain up the amp will reach full output at a lower volume setting on the deck. At higher gain settings the amp also becomes more more sensitive to noise from the car's electrical system. Try to run the gain at the lowest setting possible for you system

There is no correct gain setting. Because speakers require different power demands to reach the same output, the gains most often need to be used to compensate for these differences. If you . tried to set all the gains at half way you would probably find the system didn't sound very good. Using good judgment and listening carefully to each speaker is still the best way to tune a system.

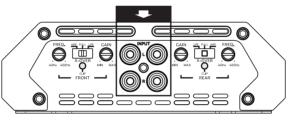


Engineering in Turkey / www.reiselektronik.com.tr

(I) REISS AUDIO

AMPLIFIER OWNER'S MANUAL

A crossover is a device that removes unwanted frequencies from a speaker or amplifier.A tweeter can easily be destroyed by bass notes if they are not filtered out.Likewise a subwoofer will not sound natural if it is playing midrange notes. A crossover removes these sounds from the speaker. As you might guess, careful adjustment in need to ensure that all the speakers are playing the right sounds and that you are left with no "holes" or low spots in the frequency response.


CROSSOVER CONTROLS

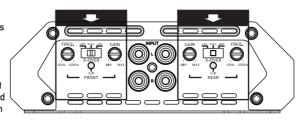

(I) REISS AUDIO

SPEAKER OUTPUTS

This amplifier is a multi channel amplifier design. Meaning it has more than one channel of speaker outputs. It is equipped with a large block style terminal for speaker connection. Make this connection carefully and neatly. strip your wire back and twist the exposed leads and insert them into the block terminal while being careful that there is no loose or fraved strands of wire and tighten the Allen head screw down on the terminal till the wire is tightly secured in

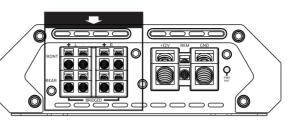

If the wires ever come in contact with each other the amplifier will go into protection. Know your total ohm load before you make any connections.

INSTALLATION INSTRUCTIONS

- Before you start, disconnect the negative cable from the car battery. Tape up the end so it is isolated from the battery.
- Run an appropriate gauge wire from the battery to the amplifier. Plan this part of the installation carefully, this cable will carry very high current. If it should short to the body and it is not properly fused it could catch fire.
- Connect the power wire to the battery using a fuse capable of the total current load of all amplifiers connected. Don't install the fuse yet. Wait until the end. locate the fuse as close as possible to the battery. If the fuse is further that 18 inches (wire length) from the battery you should reevaluate the wire and fuse
- placement. Find the closest clear metal area to the amp for a ground, sand, grind or scrape all paint and undercoating from the body and screw the ground securely in place.
- It is advisable to test the ground with an ohmmeter between the ground cable and the negative battery cable to insure a good low resistance connection. Some alloys used in modern cars do not offer the best ground. If you believe this is the case consult with the vehicle manufacturer.
- Run the speaker wire to the speakers. It is advised that you leave some extra wire at this point. You can "clean it up"
- If you haven't already done so, mount the amp now.
- Connect the power and ground to the amplifier. Only after this step should you install the fuse at the battery.
- Connect the remote wire from the head unit to the amplifier . Now is a good time to turn on the amp for the first time. Make sure it turns on properly and does not go into protection.
- Connect the speaker wires to the amp and speakers (make sure the amp is off first). Make sure the polarity(+add-)is
- Connect the RCA's to the amp.
 - Double check the amplifier controls at this time. Make sure everything is set correctly for your system. Now you're ready to play it for the first time. It is best to leave the gain all the way down at first. Start with the head
- unit volume low and work your way up.
- Now you can tune the amp. Take your time and make only one adjustment at a time. It may take some time to get the system fully adjusted. During this time the amp is drawing current from the battery. You should check the battery voltage from time to time and re-charge it if it gets low. that's it. You're done. Now have fun.

Engineering in Turkey / www.reiselektronik.com.tr


(I) REISS AUDIO

2

AMPLIFIER OWNER'S MANUAL





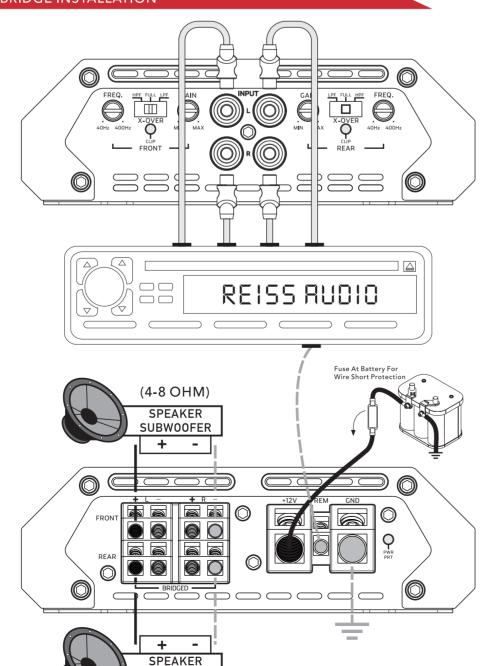

AMPLIFIER OWNER'S MANUAL

TROUBLE SHOOTING

NO POWER LED ON, NO OUTPUT

- Check +12V, GND and remote connection
- Check the external fuses or built-in.

POWER LED ON, NO OUTPUT

- Check source unit for output
- Check input gain control - Check RCA cable quality and connection
- Check speaker and wiring for shorts
- Check for damaged speakers

NO SOUND ON ONE CHANNEL

- Swap left/right input to check source If sound swaps, source or signal cable is bad
- Swap left/right speaker to check speakers
- If sound does not swap, speaker or speaker wiring is bad . . . In any case, consult authorized dealer

AMPLIFIER GOES IN PROTECTION MODE AT HIGHER GAIN

- Check speaker impedance.
- Check working voltages (9.0V 16.0Volts)
- Check speaker wiring for short circuit

ENGINE OR ALTERNATOR WHINE NOISE

- Check wiring make sure RCA cables are not run parallel on same side of vehicle as power cable. - Check any processors in the signal path between source unit and amplifier
- Make sure ground pin (shield or outer barrel of RCA cables) have not lost connection and that source
- unit has a good reference ground.

WARRANTY

 $Should your amplifier require service \ Please \ consult \ with \ the \ dealer \ from \ which \ it \ was \ purchased, \ or$ contact REISS AUDIO Local Dealer. Do not attempt to return your amplifier directly to us without first calling for a Return Authorization

Number. Units received without an accompanying Return Authorization Number will be processed more slowly. Additionally, you must include a copy of your purchase receipt from an authorized dealer for consideration of in-warranty service: otherwise repair charges will apply. Units received without a receipt will be held for 30 days, allowing us time to contact you and obtain a copy of the receipt. After 30 davs, all units will be returned.

MODEL NO.	RS-Q60.4
Circuit Topology	Full Range Analog
RMS POWER OUTPUT AT 1 Ω	N/A
RMS POWER OUTPUT AT 2 Ω	85Wx4CH
RMS POWER OUTPUT AT 4 Ω	60Wx4CH
RMS POWER OUTPUT AT 4 Ω BRIDGED	170Wx2CH
TOTAL HARMONIC DISTORTION	<0.1%
S/N RATIO REF 1W AT 4Ω	>90dB
GAIN RANGE	0.2-6V
CROSSOVER RANGE	40-400Hz
FREQUENCY RANGE	20-20KHz
DIMENSIONS(MM) LxWxH	258×148×47.5

AMPLIFIER OWNER'S MANUAL

SPECIFICATIONS

Engineering in Turkey / www.reiselektronik.com.tr

() REISS AUDIO

AMPLIFIER OWNER'S MANUAL

REISS AUDIO

Copyright @2023 REISS Audio. Engineering in Turkey / www.reiselektronik.com.tr CE S S

(4-8 OHM) 5 4 Engineering in Turkey / www.reiselektronik.com.tr

SUBW00FER

Engineering in Turkey / www.reiselektronik.com.tr

6



Models:

RS-Q60.4

Features:

- High Performance Anolog Circuit Design
- Mini Plus Size Footprint for Easy Installation of Many Applications
- Variable Full Crossover Filters: LPF / FULL / HPF
- Surface Mount Component Technology
- Audio Precision Quality Control Verification
- Stable&Reliable Multi Layers PCB Trace Layout
- Power & Protection & Clipping Led Lights Status Indicator
- Short Circuit, Thermal and Voltage protection

(2-8 OHM)

SPEAKER

Engineering in Turkey / www.reiselektronik.com.tr

(2-8 OHM)

SPEAKER

SPEAKER

(2-8 OHM)

Engineering in Turkey / www.reiselektronik.com.tr

LPE FULL HPE

REISS RUDIO

THANK YOU

AMPLIFIER OWNER'S MANUAL

Thank you for choosing REISS / RS-Q60.4 amp! Your choice of REISS / RS-Q60.4 amp indicates a desire for high quality music reproduction in the automobile. RS-Q60.4 amp brings to you over four decades of car audio expertise. So whether you are a daily driving music lover, or a serious car audio competitor, RS-Q60.4 amp have the product for you!

To take full advantage of the RS-Q60.4 amp gear you have just purchased, please read and follow the instructions in this manual. As with all of our products, professional installation by an authorized REISS AUDIO dealer is $highly\ recommended!\ Otherwise,\ the\ performance\ of\ your\ new\ gear\ may\ not\ be\ satisfactory.\ In\ addition\ to\ the$ $installation\ services\ and\ expertise\ offered\ by\ an\ authorized\ REISS\ AUDIO\ dealer,\ the\ warranty\ of\ this\ product$ $may\ be\ extended\ when\ installed\ by\ an\ authorized\ REISS\ AUDIO\ dealer\ .\ Be\ sure\ to\ ask\ your\ authorized\ REISS\ AUDIO\ dealer\ .\ Be\ sure\ to\ ask\ your\ authorized\ REISS\ AUDIO\ dealer\ .\ Be\ sure\ to\ ask\ your\ authorized\ REISS\ AUDIO\ dealer\ .\ Be\ sure\ to\ ask\ your\ authorized\ REISS\ authorized\ REISS\ AUDIO\ dealer\ .\ Be\ sure\ to\ ask\ your\ authorized\ REISS\ authorized\ REISS\$ AUDIO dealer about whether your product may qualify for an extended warranty. You're Headed in the Right Direction with REISS / RS-Q60.4 amp!

INTRODUCTION

The REISS / RS-Q60.4 amplifier offer high quality audio reproduction for the audiophile and the everyday listener a like. All models feature fully variable crossovers with 12 dB per octave slopes, allowing you the ability to tailor the sound to best fit the speakers and your listening preferences.

Platinum finish connections Ensures solid electrical connections that resist corrosion

Fully Variable Crossovers Fully variable crossovers promote installation ease and save the cost of outboard $crossovers. \ Additionally, they \ may \ be \ used \ in \ conjunction \ with \ outboard \ passive \ or \ active \ crossovers, \ depending$ on the complexity required by the system. The 12 dB per octave slope offers steep roll-off above or below the selected frequency

Protection Circuity Against Overload, Short Circuit, Thermal, Low Voltage, High Voltage, and Reverse Polarity. These Protection features are designed to protect the amplifier from misuse, as well as from common

INSTALLATION

Professional installation by an authorized REISS AUDIO dealer is highly recommended! Otherwise, the performance of your new gear may not be satisfactory. In the event that you decide to do your own installation. please read and follow this manual very carefully. Failure to do so may compromise the integrity of this product. your automobile, and possibly void the product warranty.


Amplifiers are generally mounted in the hatch/trunk area of a car or SUV. and under or behind the seat of most pick up trucks. Select a location that will provide adequate ventilation for the amplifier. Avoid mounting the amplifier with the fins facing down. The fins should be facing up, either vertically or horizontally. Secure the amplifier with the screws provided.

Before securing the amplifier, inspect the mounting location carefully to ensure that you do not drill into or damage any electrical, hydraulic, fluid, or fuel lines.

Input Section

Because of the wide range of head unit output configurations all RS-Q60.4 amp have an adjustable input sensitivity of "Gain" The gain is not a volume or a power limiting control like a throttle. It makes the amp more sensitive to input from the stereo, with the gain up the amp will reach full output at a lower volume setting on the deck. At higher gain settings the amp also becomes more more sensitive to noise from the car's electrical system. Try to run the gain at the lowest setting possible for you system

There is no correct gain setting. Because speakers require different power demands to reach the same output, the gains most often need to be used to compensate for these differences. If you . tried to set all the gains at half way you would probably find the system didn't sound very good. Using good judgment and listening carefully to each speaker is still the best way to tune a system.

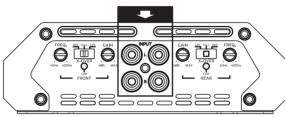


 ${\bf Engineering\ in\ Turkey\ /\ www.reiselektronik.com.tr}$

AMPLIFIER OWNER'S MANUAL

CROSSOVER CONTROLS

A crossover is a device that removes unwanted frequencies from a speaker or amplifier.A tweeter can easily be destroyed by bass notes if they are not filtered out.Likewise a subwoofer will not sound natural if it is playing midrange notes. A crossover removes these sounds from the speaker. As you might guess, careful adjustment in need to ensure that all the speakers are playing the right sounds and that you are left with no "holes" or low spots in the frequency response.

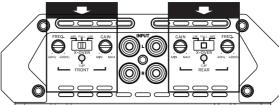

(I) REISS AUDIO

AMPLIFIER OWNER'S MANUAL

MODEL NO.

Circuit Topology

RMS POWER OUTPUT AT 1Ω

RMS POWER OUTPUT AT 2 Ω

RMS POWER OUTPUT AT 4 O

RMS POWER OUTPUT AT 4 O BRIDGED

TOTAL HARMONIC DISTORTION

S/N RATIO REF 1W AT 4Ω

GAIN RANGE

CROSSOVER RANGE


FREQUENCY RANGE

DIMENSIONS(MM) LxWxH

SPECIFICATIONS

SPEAKER OUTPUTS

This amplifier is a multi channel amplifier design. Meaning it has more than one channel of speaker outputs. It is equipped with a large block style terminal for speaker connection Make this connection carefully and neatly, strip your wire back and twist the exposed leads and insert them into the block terminal while being careful that there is no loose or frayed strands of wire and tighten the Allen head screw down on the terminal till the wire is tightly secured in place.

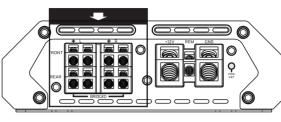

If the wires ever come in contact with each other the amplifier will go into protection. Know your total ohm load before you make any connections

INSTALLATION INSTRUCTIONS

- Before you start, disconnect the negative cable from the car battery. Tape up the end so it is isolated from the battery.
- Run an appropriate gauge wire from the battery to the amplifier. Plan this part of the installation carefully, this cable will carry very high current. If it should short to the body and it is not properly fused it could catch fire.
- Connect the power wire to the battery using a fuse capable of the total current load of all amplifiers connected. Don't install the fuse yet. Wait until the end. locate the fuse as close as possible to the battery. If the fuse is further that 18 inches (wire length) from the battery you should reevaluate the wire and fuse
- Find the closest clear metal area to the amp for a ground, sand, grind or scrape all paint and undercoating from the body and screw the ground securely in place.
- It is advisable to test the ground with an ohmmeter between the ground cable and the negative battery cable to insure a good low resistance connection. Some alloys used in modern cars do not offer the best ground.If you believe this is the case consult with the vehicle manufacturer.
- Run the speaker wire to the speakers.It is advised that you leave some extra wire at this point. You can "clean it up"
- If you haven't already done so, mount the amp now. Connect the power and ground to the amplifier.
- Only after this step should you install the fuse at the battery.
- Connect the remote wire from the head unit to the amplifier . Now is a good time to turn on the amp for the first time Make sure it turns on properly and does not go into protection.
- Connect the speaker wires to the amp and speakers (make sure the amp is off first). Make sure the polarity(+add-)is
- Connect the RCA's to the amp.
- Double check the amplifier controls at this time. Make sure everything is set correctly for your system.
- Now you're ready to play it for the first time. It is best to leave the gain all the way down at first. Start with the head unit volume low and work your way up.
- Now you can tune the amp. Take your time and make only one adjustment at a time. It may take some time to get the system fully adjusted. During this time the amp is drawing current from the battery. You should check the battery voltage from time to time and re-charge it if it gets low. that's it. You're done. Now have fun.

 $Engineering\ in\ Turkey\ /\ www.reiselektronik.com.tr$

2

 $Engineering\ in\ Turkey\ /\ www.reiselektronik.com.tr$

(I) REISS AUDIO

RS-Q60.4

Full Range Analog

85Wx4CH

60Wx4CH

170Wx2CH

<0.1%

>90dB

0.2-6V

40-400Hz

20-20KHz

258x148x47.5

AMPLIFIER OWNER'S MANUAL

NORMAL INSTALLATION




AMPLIFIER OWNER'S MANUAL

(I) REISS AUDIO

Engineering in Turkey / www.reiselektronik.com.tr

(I) REISS AUDIO



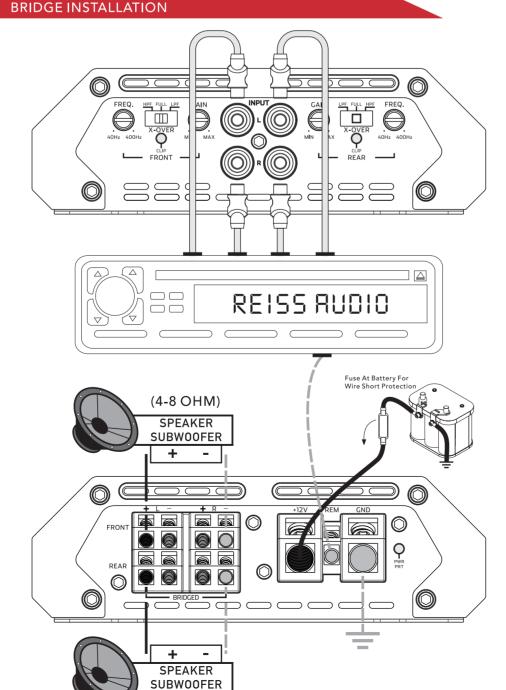

(4-80HM)

5

4

AMPLIFIER OWNER'S MANUAL

(I) REISS AUDIO

TROUBLE SHOOTING

NO POWER LED ON, NO OUTPUT

- Check +12V, GND and remote connection
- Check the external fuses or built-in.

POWER LED ON, NO OUTPUT

- Check source unit for output
- Check input gain control - Check RCA cable quality and connection
- Check speaker and wiring for shorts
- Check for damaged speakers

NO SOUND ON ONE CHANNEL

- Swap left/right input to check source If sound swaps, source or signal cable is bad
- Swap left/right speaker to check speakers
- If sound does not swap, speaker or speaker wiring is bad ... In any case, consult authorized dealer

AMPLIFIER GOES IN PROTECTION MODE AT HIGHER GAIN

- Check speaker impedance.
- Check working voltages (9.0V 16.0Volts)
- Check speaker wiring for short circuit

ENGINE OR ALTERNATOR WHINE NOISE

- Check wiring make sure RCA cables are not run parallel on same side of vehicle as power cable.
- Check any processors in the signal path between source unit and amplifier
- Make sure ground pin (shield or outer barrel of RCA cables) have not lost connection and that source unit has a good reference ground.

WARRANTY

 $Should\ your\ amplifier\ require\ service\ Please\ consult\ with\ the\ dealer\ from\ which\ it\ was\ purchased,\ or$ contact REISS AUDIO Local Dealer.

Engineering in Turkey / www.reiselektronik.com.tr

Do not attempt to return your amplifier directly to us without first calling for a Return Authorization Number. Units received without an accompanying Return Authorization Number will be processed more slowly. Additionally, you must include a copy of your purchase receipt from an authorized dealer for consideration of in-warranty service; otherwise repair charges will apply. Units received without a receipt will be held for 30 days, allowing us time to contact you and obtain a copy of the receipt. After 30 days, all units will be returned.

AMPLIFIER OWNER'S MANUAL



Copyright © 2023 REISS Audio.

6

(E & 9 X